# Foenix/MCP

# A Simple, Portable Operating System for the Foenix Line of Computers version 1.0-alpha.x

## Overview

The Foenix/MCP is the new kernel for the Foenix line of retro-style computers. Written in C, primarily for the A2560 series of M680x0 based computers, the kernel is meant to be simple and portable across the entire line of Foenix computers and able to run on any CPU the systems will provide.

The intention of Foenix/MCP is to provide very simple startup and access to the Foenix computers for their owners. It is not intended to be the operating system that solves all problems but is really little more than a glorified loader. Its purpose is to help the user get started with their Foenix and run programs, but as much as possible it should get out of the programmer's way rather than require them to program in a certain way. As such, there are a few key goals in the design, as well as some anti-goals:

# Foenix/MCP Goals

- Allow the user to access and manage files on hard drive, SD card, or floppy disk (for machines that support floppy drives)
- · Allow users to load and run programs
- Provide functions to support user programs in doing tedious or complex low level tasks that may be necessary but hardly interesting to write as part of a game.
- Provide initialization for the built-in devices at boot up

# Foenix/MCP Anti-goals

- Enforce a certain way of programming a Foenix computer
- Lock any part of the machine down so it cannot be accessed by a user programmer
- Require user programs to incorporate or link multiple libraries of code to do anything

In keeping with these goals and anti-goals, Foenix/MCP is very simple. It is a single tasking kernel with no support for multi-tasking. As much as possible, however, the kernel routines are written in a re-entrant fashion to try to be thread safe if a user program wants to add multi-tasking. There is currently no memory manager included in the system calls, although one may need to be added in the near future. The concept is that once a user program is loaded, it may have access to everything. While drivers are included for many of the devices on the Foenix computers, programs are welcome to take over direct control of those devices or replace the included device drivers, as needed. Doing so may interfere with documented functionality of Foenix/MCP, but this to be encouraged rather than otherwise.

Your Foenix computer is yours, absolutely.<sup>1</sup>

# **Copyright Information**

Foenix/MCP and all code except for the FatFS file system library are published under the BSD 3 Clause License. Please see the source code for the license terms.

The Foenix/MCP file system is provided by the FatFS file system, which is covered under its own license. For information about the author of FatFS and its license terms, please see the Foenix/MCP source code.

## **Devices**

Devices on the Foenix computers fall into one of two main categories: channel devices, and block devices.

<sup>1</sup> Warning: Please do not attempt to install an ENCOM SHV series digitizing laser on any Foenix computer running the Foenix/MCP operating system. Early versions of the MCP displayed erratic behavior when given access to a digitizing laser. The author of Foenix/MCP, ENCOM, and their associated subsidiaries and agents will not be liable for any unexpected behavior experienced by users. END-OF-LINE

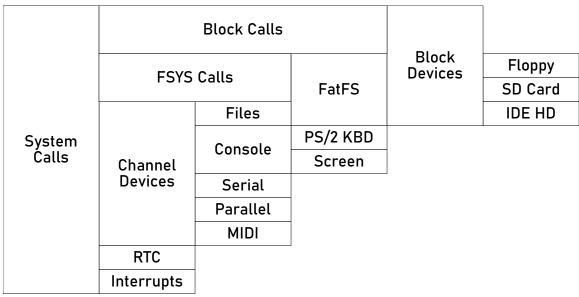


Figure 1: Organization of Foenix/MCP

## **Channel Devices**

Channel devices are predominantly sequential, byte oriented devices. They are essentially byte streams. A program can read or write a series of bytes from or to the device. A channel can have the notion of a "cursor" which represents the point where a read or write will happen. Examples of channel devices include the console, the serial ports, and files.

Currently, the only fully supported channel devices are open files, the keyboard, and the screen. In the future, there should be full support for the serial ports, the parallel port, and the MIDI ports. Channel devices are assigned as follows:

Number	Device
0	Main console (keyboard and screen A)
1	Secondary console (keyboard and screen B)
2	Serial Port #1
3	Serial Port #2
4	Parallel Port
5	MIDI Ports
6	Files

By default, channels 0 and 1 are open automatically to devices 0 and 1 respectively at boot time.

## **Block Devices**

Block devices organize their data into blocks of bytes. A block may be read from or written to a block device, and blocks maybe accessed in any order desired. Examples of block devices include the IDE/PATA hard drive, the SD card, and the floppy drive.

Out of the box, there are three block devices supported by Foenix/MCP:

Number	Device
0	SD card
1	Floppy drive (if available)
2	IDE (PATA) hard drive

## Files Channels

Files represent a special channel pseudo-device. Although files are stored on block devices, they may be open as file channels, which may be accessed like a channel device. There is a special file channel driver, which converts channel reads and writes on a file to the appropriate block calls. Access to these file channels is managed in part through the file system calls listed below.

# **Command Line Utility**

## Commands

The command line utility works much like the command line in CP/M or MS-DOS. The first "word" typed on a line is the "command" to be executed. There are several built-in commands, but if a command is not recognized as a built-in command, Foenix/MCP will try to find and run an executable file of that name. In the current version of Foenix/MCP, it will look for a PGX or PGZ file of that name in the current working directory. In future versions, a more sophisticated search mechanism will be in place, and other file formats may be supported.

The built in commands include:

HELP / ? – Print out a potentially useful help message, summarizing the commands that may be used.

CD <path> - Change the current working directory.

CLS – Clear the screen

DEL <path> - Delete a file or empty directory, given its path

DISKFILL <drive #> <sector #> <byte> - A diagnostic tool to fill a sector on a drive with a byte

DISKREAD <drive #> <sector #> - A diagnostic tool to read and display a sector on a drive

DUMP <address> [<count>] - Display <count> bytes of memory on the screen. If no count is provided, the command will display sixteen bytes.

LABEL <drive #> <label> - Set the volume label of a drive.

LOAD <path> – Read a file into memory

MKDIR <path> - Create a directory, given its path

PEEK8 <address> – Read and display a byte from an address in memory.

PEEK16 <address> – Read and display a 16-bit word from an address in memory.

PEEK32 <address> – Read and display a 32-bit word from an address in memory.

POKE8 <address> <value> – Store a byte at an address in memory

POKE16 <address> <value> – Store a 16-bit word at an address in memory

POKE32 <address> <value> - Store a 32-bit word at an address in memory

PWD – Display the current working directory

REN <old path> <new path> - Rename a file

SET <name> <value> - Assign a value to a setting (see below)

GET <name> - Display the current value of a setting

SYSINFO – Display potentially useful information about the Foenix computers

TYPE <path> – Read and print out a file

## **Settings**

In addition to commands, the command line utility provides a number of "settings." Settings may be changed with the SET command and viewed with the GET command (if they are readable). Settings will, in general, have some sort of side-effect by being set. They can turn on or off particular functions, change colors, *etc*. Settings currently in the command line include:

DATE yyyy-mm-dd – The current date in the real time clock

TIME hh:mm:ss - The current time in the real time clock

FONT <path> – The current font used on the active text displayed

This set will expand over time. Settings to be implemented in the future might include:

KEYBOARD <path> - The keyboard layout

VOLUME <value> - The volume level of audio

GRAPHICS <value> – The graphics setting for Vicky

BORDERSIZE <value> - The size of the border

BORDERCOLOR <color> - The color of the border

TEXTCOLOR <color> – The color of the text and the background

# System Calls

On the Motorola 68000 series computers, system calls are made through the TRAP #15 instruction. The function number (which determines which call to make) is passed in the D0 register. Parameters are passed in the data registers: D1 for the first parameter, D2 for the second, and so on. Results are returned in the D0 register, and may be 8-bits, 16-bits, or 32-bits in length.

Note that even pointers are passed using the data registers, when address registers might make more sense. This was done to keep the bindings of the system calls more straightforward. If this turns out to be a problem, later versions of the FoenixMCP may use the stack instead.

For many system calls, the return value is simply a status indicator: 0 represents success, and a negative number indicates an error condition, with the value specifying what error. For those functions that return a value (*e.g.* sys\_chan\_read), the data returned will be 0 or positive for success, and a negative number for an error condition. An exception would be sys\_int\_register, which must return a pointer and has no error condition.

The system calls are broken out into five major blocks:

- Core: these are the most essential calls for the operating system. Mostly, this is where interrupts are managed.
- Channel: these are the calls for working with channels and channel devices.

- Block: these are the calls for accessing block devices at a low level. Most user programs will not need these calls
- File System: these are the calls for accessing files at a higher level
- Process and Memory: There's only one here at the moment, but this block will support running programs and managing memory.
- Miscellaneous: these are calls I could not figure out a better place for

# Core Calls

Number	Name	Description
0x00	sys_exit	Exit the user program and return the command line
0x01	Reserved	
0x02	sys_int_register	Register a function as an interrupt handler
0x03	sys_int_enable	Enable a particular interrupt
0x04	sys_int_disable	Disable a particular interrupt
0x05	sys_int_enable_all	Enable all maskable interrupts
0x06	<pre>sys_int_disable_all</pre>	Disable all maskable interrupts
0x07	sys_int_clear	Clear an interrupt's pending flag
0x08	sys_int_pending	Return true if an interrupt's pending flag is set

Function	0x00	sys_exit		
Description	This fo	This function ends the currently running program and returns control to the		
	comm	command line. It takes a single short argument, which is the result code that		
	should	should be passed back to the kernel. This function does not return.		
Prototype	void	sys_exit(short result)		
C Example	sys_e	xit(0); // Quit the program with result 0		
Assembly		d0 ; Function 0: sys_exit d1 ; Result code: 0 #15		

Function	0x02	sys_int_register
Description	Regist	ers a function as an interrupt handler. An interrupt handler is a function
	which	takes and returns no arguments and will be run in at an elevated
	privile	ege level during the interrupt handling cycle.
	The fir	rst argument is the number of the interrupt to handle, the second
	argum	nent is a pointer to the interrupt handler to register. Registering a null

	pointer as an interrupt handler will "deregister" the old handler.				
	The function returns the handler that was previously registered.				
Prototype	<pre>p_int_handler sys_int_register(short int_num,</pre>				
C Example	<pre>void sof_handler() { }</pre>				
	<pre>sys_int_register(0, sof_handler);</pre>				
Assembly	move.w #\$02,d0 ; Function sys_int_register clr.w d1 ; 0 for Channel A SOF interrupt lea.l sof_handler,d2 ; Pointer to the handler trap #15				

Function	0x03 sys_int_enable		
Description	This function enables a particular interrupt at the level of the interrupt		
	controller. The argument passed is the number of the interrupt to enable. Note		
	that interrupts that are enabled at this level will still be disabled, if interrupts		
	are disabled globally by sys_int_disable_all.		
Prototype	void sys_int_enable(short int_num)		
C Example	sys_int_enable(0); // Enable the Channel A SOF interrupt		
Assembly	move.w #\$03,d0 ; Function: sys_int_enable clr.w d1 ; 0 is Channel A SOF interrupt trap #15		

Function	0x04	sys_int_disable		
Description	This fu	This function disables a particular interrupt at the level of the interrupt		
	contro	controller. The argument passed is the number of the interrupt to disable.		
Prototype	void	void sys_int_disable(short int_num)		
C Example	sys_int_disable(0); // Disable the SOF interrupt			
Assembly	move. clr.w trap	· ·		

Function	0x05	sys_int_enable_all	
Description	This fu	unction enables all maskable interrupts at the CPU level. It returns a	
	systen	system-dependent code that represents the previous level of interrupt	

	masking.
Prototype	short sys_int_enable_all()
C Example	<pre>sys_int_enable_all();</pre>
Assembly	<pre>move.w #\$05,d0 ; Function: sys_int_enable_all trap #15</pre>

Function	0x06	sys_int_disable_all		
Description	This function disables all maskable interrupts at the CPU level. It returns a system-dependent code that represents the previous level of interrupt masking.			
Prototype	short	short sys_int_disable_all()		
C Example	sys_i	sys_int_disable_all();		
Assembly	move. trap	w 0x06,d0 ; Function: sys_int_disable_all #15		

Function	0x05	sys_int_enable_all		
Description	systen	This function enables all maskable interrupts at the CPU level. It returns a system-dependent code that represents the previous level of interrupt masking.		
Prototype	short	short sys_int_enable_all()		
C Example	sys_i	<pre>sys_int_enable_all();</pre>		
Assembly		move.w #\$05,d0 ; Function: sys_int_enable_all trap #15		

Function	0x06	sys_int_clear	
Description		unction acknowledges the processing of an interrupt by clearing its ng flag in the interrupt controller.	
Prototype	<pre>void sys_int_clear(short int_num)</pre>		
C Example	<pre>sys_int_clear(1); // Clear the Channel A SOL interrupt</pre>		
Assembly		w #\$05,d0 ; Function: sys_int_clear w #1,d1 ; Channel A SOL interrupt #15	

Function	0x06	sys_int_pending
----------	------	-----------------

Description	This function acknowledges the processing of an interrupt by clearing its pending flag in the interrupt controller.			
Prototype	<pre>short sys_int_clear(short int_num)</pre>			
C Example	sys_int_clear(1); // Clear the Channel A SOL interrupt			
Assembly	<pre>move.w #\$05,d0 ; Function: sys_int_clear move.w #1,d1 ; Channel A SOL interrupt trap #15</pre>			

# **Channel Calls**

Number	Name	Description
0x10	sys_chan_read	Read bytes from a channel
0x11	sys_chan_read_b	Read a byte from a channel
0x12	sys_chan_read_line	Read a line of text from a channel
0x13	sys_chan_write	Write bytes to a channel
0x14	sys_chan_write_b	Write a byte to a channel
0x15	sys_chan_flush	Ensure any pending writes are completed
0x16	sys_chan_seek	Set the position of the read/write cursor in the channel
0x17	sys_chan_status	Get the status of the channel
0x18	sys_chan_ioctrl	Send a command to the channel (channel dependent)
0x19	sys_chan_register	Register a channel device driver
0x1A	sys_text_setsizes	Configure the console for the display resolution

Function	0x10	sys_chan_read	
Description	Read bytes from a channel and fill a buffer with them, given the number of the channel and the size of the buffer. Returns the number of bytes read.		
Prototype	short	<pre>sys_chan_read(short channel,    unsigned char * buffer, short size)</pre>	
C Example	unsigr	<pre>c =; // The channel number ed char buffer[128]; n = sys_chan_read(c, buffer, 128);</pre>	
Assembly	move.v lea.l	#\$10,d0 ; Function: sys_chan_read chan,d1 ; Channel number buffer,d2 ; Address of buffer #128,d3 ; Size of buffer	

Function	0x11	sys_chan_read_b
----------	------	-----------------

Description	Read a single byte from the channel. Returns the byte, or 0 if none are available.
Prototype	unsigned char sys_chan_read_b(short channel)
C Example	<pre>short c =; // The channel number unsigned char b = sys_chan_read_b(c);</pre>
Assembly	move.w #\$11,d0 ; Function: sys_chan_read move.w chan,d1 ; Channel number trap #15 ; Byte in d0

Function	0x12	sys_chan_read_line	
Description	Read a line of text from a channel (terminated by a newline character or by the end of the buffer). Returns the number of bytes read.		
Prototype	short	<pre>sys_chan_read_line(short channel,      unsigned char * buffer, short size)</pre>	
C Example	unsigr	<pre>c =; // The channel number ned char buffer[128]; n = sys_chan_read_line(c, buffer, 128);</pre>	
Assembly	move.v	#\$12,d0 ; Function: sys_chan_read_line chan,d1 ; Channel number buffer,d2 ; Address of buffer #128,d3 ; Size of buffer #15	

Function	0x13	0x13 sys_chan_write			
Description		Write bytes from a buffer to a channel, given the number of the channel and the size of the buffer. Returns the number of bytes written.			
Prototype	short	<pre>sys_chan_write(short channel,     unsigned char * buffer, short size)</pre>			
C Example	unsigr	<pre>short c =; // The channel number unsigned char buffer[128]; // short n = sys_chan_write(c, buffer, 128);</pre>			
Assembly	move.v	w #\$13,d0 ; Function: sys_chan_write w chan,d1 ; Channel number buffer,d2 ; Address of buffer w #128,d3 ; Size of buffer #15			

\_

\_

Function	0x14	sys_chan_write_b		
Description	Write a	Write a single byte to the channel.		
Prototype	short	sys_chan_write_b(short channel, unsigned char b)		
C Example		c =; // The channel number han_read_b(c, 0x41);		
Assembly	move.w	w #\$14,d0 ; Function: sys_chan_write_b w chan,d1 ; Channel number b #\$41,d2 ; The byte to write #15		

Function	0x15	sys_chan_flush
Description	Ensure	any pending writes to a channel are completed.
Prototype	short	sys_chan_flush(short channel)
C Example		<pre>c =; // The channel number an_flush(c);</pre>
Assembly	1	#\$15,d0 ; Function: sys_chan_flush chan,d1 ; Channel number 15

Function	0x16	sys_chan_seek
Description	Set the position of the input/output cursor. This function may not be honored	
	by a gi	ven channel as not all channels are "seekable." In addition to the usual
	channe	el parameter, the function takes two other parameters:
	•	position = the new position for the cursor
	•	base = whether the position is absolute (0), or relative to the current
		position (1).
Prototype	short	sys_chan_seek(short channel,
		long position, short base)
C Example	short	c =; // The channel number
	1	nan_seek(c, -10, 1); // Move the point back 10 bytes
Assembly	1	w #\$16,d0 ; Function: sys_chan_seek
		v chan,d1 ; Channel number L #\$FFFFFFF,d2 ; Position: -1
		w #1,d3 ; Base: relative

L
ITran #15
Clap   115

Function	0x17	sys_chan_status
Description	Gets the status of the channel. The meaning of the status bits is channel-specific, but four bits are recommended as standard:  • 0x01: The channel has reached the end of its data  • 0x02: The channel has encountered an error  • 0x04: The channel has data that can be read  • 0x08: The channel can accept data	
Prototype	short	sys_chan_status(short channel)
C Example	1	<pre>c =; // The channel number nan_status(c);</pre>
Assembly		#\$17,d0 ; Function: sys_chan_status v chan,d1 ; Channel number #15

Function	0x18	sys_chan_ioctrl	
Description	Send a command to a channel. The mapping of commands and their actions are channel-specific. The return value is also channel and command-specific. In addition to the channel number, the function takes three arguments: <ul> <li>command: the number of the command to execute</li> <li>buffer: an array of bytes to serve as additional data for the command (may be null)</li> <li>size: the number of bytes in the buffer</li> </ul>		
Prototype	short	<pre>sys_chan_ioctrl(short channel,</pre>	
C Example	short	<pre>c =;  // The channel number cmd =;  // The command r = sys_chan_status(c, cmd, 0, 0); // Send simple command</pre>	
Assembly	move.v	<pre>#\$18,d0 ; Function: sys_chan_ioctrl chan,d1 ; Channel number f #1,d2 ; Command 1</pre>	

```
move.l #0,d3 ; Null buffer
move.w #0,d4 ; Buffer is empty
trap #15
; Result is in D0
```

Function	0x19	sys_chan_register		
Description	Registe	er a device driver for a channel device. A device driver consists of a		
	structu	re that specifies the name and number of the device as well as the		
	various	s handler functions that implement the channel calls on a channel for		
	that de	that device.		
	See the	e section "Extending the System" below for more information.		
Prototype	short	short sys_chan_register(struct s_dev_chan *device)		
C Example		t s_dev_chan dev; r = sys_chan_register(&dev); // Register the driver		
Assembly		<pre>#\$19,d0 ; Function: sys_chan_register dev,d1 ; Device descriptor #15</pre>		

# **Block Calls**

Number	Name	Description
0x20	sys_bdev_getblock	Read a block from the block device
0x21	sys_bdev_writeblock	Write a block to a block device
0x22	sys_bdev_flush	Ensure any pending writes are completed
0x23	sys_bdev_status	Get the status of the block device
0x24	sys_bdev_ioctrl	Send a command to the block device (device dependent)
0x25	sys_bdev_register	Register a block device driver

Function	0x20	sys_bdev_getblock
Description	Read a	block from a block device. Returns the number of bytes read.
	In addi	tion the number of the block device, this function takes three ents:
	•	lba: the logical block address of the block to read
	•	buffer: the byte array in which to store the data
	•	size: the number of bytes in the byte array

Prototype	short sys_bdev_getblock(short dev, long lba, unsigned char * buffer, short size)
C Example	<pre>short bdev = BDEV_HDC; // The device number unsigned char buffer[128];  // Read the MBR of the hard drive short n = sys_bdev_getblock(bdev, 0, buffer, 128);</pre>
Assembly	move.w #\$20,d0 ; Function: sys_bdev_getblock move.w #BDEV_HDC,d1 ; Channel number clr.l d2 ; LBA: 0 (MBR) lea.l buffer,d3 ; Address of buffer move.w #128,d4 ; Size of buffer trap #15

Function	0x20	sys_bdev_putblock		
Description	Write a	Write a block from a block device. Returns the number of bytes written.		
	In addi	ition the number of the block device, this function takes three ents:		
	•	lba: the logical block address of the block to write		
	•	buffer: the byte array in which to store the data		
	•	size: the number of bytes in the byte array		
Prototype	short	short sys_bdev_putblock(short dev, long lba, unsigned char * buffer, short size)		
C Example	unsigr	bdev = BDEV_HDC; // The device number ned char buffer[128]; ite the MBR of the hard drive n = sys_chan_putblock(bdev, 0, buffer, 128);		
Assembly	move.v clr.l lea.l	buffer,d3; Address of buffer v #128,d4; Size of buffer		

Function	0x22	sys_bdev_flush		
Description	Ensure	Ensure any pending writes to a block device are completed.		
Prototype	short	sys_bdev_flush(short dev)		
C Example		<pre>bdev=; // The device number ev_flush(bdev);</pre>		
Assembly		#\$22,d0 ; Function: sys_bdev_flush bdev,d1 ; Device number 15		

Function	0x23 sys_bdev_status		
Description	Gets the status of a block device. The meaning of the status bits is device		
	specific, but there are two bits that are required in order to support the file		
	system:		
	0x01: Device has not been initialized yet		
	• 0x02: Device is present		
Prototype	short sys_bdev_status(short dev)		
C Example	<pre>short bdev =; // The channel number sys_chan_status(bdev);</pre>		
Assembly	move.w #\$23,d0 ; Function: sys_bdev_status move.w bdev,d1 ; Device number trap #15		

Function	0x24	sys_bdev_ioctrl		
Description	Send a	Send a command to a block device. The mapping of commands and their		
	actions	are device-specific. The return value is also device and command-		
	specific	c. In addition to the device number, the function takes three arguments:		
	•	command: the number of the command to execute		
	buffer: an array of bytes to serve as additional data for the comma (may be null)			
	•	size: the number of bytes in the buffer		
	Four co	ommands should be supported by all devices:		
		GET_SECTOR_COUNT (1): Returns the number of physical sectors on the device		

	GET_SECTOR_SIZE (2): Returns the size of a physical sector in bytes
	<ul> <li>GET_BLOCK_SIZE (3): Returns the block size of the device. Really only relevant for flash devices and only needed by FatFS</li> <li>GET_DRIVE_INFO (4): Returns the identification of the drive</li> </ul>
Prototype	short sys_bdev_ioctrl(short channel,
C Example	<pre>short dev =;</pre>
Assembly	move.w #\$24,d0 ; Function: sys_bdev_ioctrl move.w bdev,d1 ; Channel number move.w #1,d2 ; Command 1 move.l #0,d3 ; Null buffer move.w #0,d4 ; Buffer is empty trap #15 ; Result is in D0

Function	0x25	sys_bdev_register	
Description	Registe	er a device driver for a block device. A device driver consists of a	
	structu	re that specifies the name and number of the device as well as the	
	various	s handler functions that implement the block device calls for that device.	
	See the	See the section "Extending the System" below for more information.	
Prototype	short sys_bdev_register(struct s_dev_block *device)		
C Example	1	s_dev_block dev; r = sys_bdev_register(&dev); // Register the driver	
Assembly		#\$25,d0 ; Function: sys_chan_register dev,d1 ; Device descriptor 15	

# File System Calls

Number	Name	Description
0x30	sys_fsys_open	Open a file
0x31	sys_fsys_close	Close a file
0x32	sys_fsys_opendir	Open a directory

0x33	sys_fsys_closedir	Close a directory
0x34	sys_fsys_readdir	Read a directory entry
0x35	sys_fsys_findfirst	Find the first entry in a directory matching a pattern
0x36	sys_fsys_findnext	Find the next entry in a directory matching a pattern
0x37	sys_fsys_delete	Delete a file
0x38	sys_fsys_rename	Rename a file
0x39	sys_fsys_mkdir	Create a directory
0x3A	sys_fsys_load	Load a file into memory
0x3B	sys_fsys_save	Save a block of memory to a file
0x3C	sys_proc_run	Load and run an executable binary file
0x3D	sys_fsys_register_loader	Register a file loader

Function	0x30 sys_fsys_open		
Description	Attempt to open a file in the file system for reading or writing. Two arguments are required:		
	path: the path to the file to open		
	mode: flags indicating how the file should be opened:		
	o 0x01: Read		
	o 0x02: Write		
	○ 0x04: Create if new		
	○ 0x08: Always create		
	o 0x10: Open file if existing, otherwise create		
	o 0x20: Open for append		
	Returns a channel number associated with the file. If the returned number is negative, there was an error opening the file.		
Prototype	<pre>short sys_fsys_open(const char * path</pre>		
C Example	<pre>short chan = sys_fsys_open("hello.txt", 0x01); if (chan &gt; 0) {    // File is open for reading } else {    // File was not open chan has the error number }</pre>		
Assembly	move.w #30,d0 ; Function: sys_fsys_open lea path,d1 ; Path		

```
move.w #$01,d2 ; Mode = 1 (read existing)
trap #15
; Channel number will be in d0
```

Function	0x31	sys_fsys_close	
Description	Close a file that was previously opened, given its channel number. If there were writes done on the channel, those writes will be committed to the block device holding the file.		
Prototype	<pre>void sys_fsys_close(short chan);</pre>		
C Example	<pre>short chan = sys_fsys_open(); // sys_fsys_close(chan);</pre>		
Assembly		#\$31,d0 ; Function: sys_fsys_close (chan),d1 ; Channel number for the file 15	

Function	0x32	sys_fsys_opendir		
Description	Open a	Open a directory on a volume for reading, given its path.		
	Return failure.	s a directory handle number on success, or a negative number on		
Prototype	<pre>short sys_fsys_opendir(const char *path);</pre>			
C Example	<pre>short dir = sys_fsys_opendir("/hd0/System"); if (dir &gt; 0) {    // dir can be used for reading the directory entries } else {    // There was an error error number in dir }</pre>			
Assembly	lea.l trap #	#\$32,d0 ; Function: sys_fsys_opendir path,d1 ; Path #15 contains the directory number or an error		

Function	0x33	sys_fsys_closedir
Description	Close a	previously open directory, given its number.
Prototype	void s	sys_fsys_closedir(short dir);
C Example	<pre>short dir = sys_fsys_opendir("/hd0/System"); if (dir &gt; 0) {</pre>	

```
// dir can be used for reading the directory entries
} else {
    // There was an error... error number in dir
}

Assembly move.w #$33,d0 ; Function: sys_fsys_opendir
move.w (dir),d1 ; Directory number
trap #15
```

```
Function
                  sys_fsys_readdir
            0x34
Description
            Given the number of an open directory, and a buffer in which to place the data,
            fetch the file information of the next directory entry. (See below for details on
            the file info structure.)
            Returns 0 on success, a negative number on failure.
            short sys fsys readdir(short dir, struct s file info *file);
Prototype
            short dir = sys fsys opendir("/hd0/System");
C Example
            if (dir > 0) {
              // dir can be used for reading the directory entries
              struct s_file_info file;
              if (sys fsys readdir(dir, &file info) == 0) {
                // file info contains information...
              } else {
                // Could not read the file entry...
            } else {
              // There was an error… error number in dir
            move.w #$34,d0 ; Function: sys_fsys_opendir
move.w (dir),d1 ; Directory number
Assembly
            lea.l file info,d2 ; Pointer to the file info structure
            trap #15
```

Function	0x35	sys_fsys_findfirst	
Description	Given 1	the path to a directory to search, a search pattern, and a pointer to a	
	file_inf	o structure, return the first entry in the directory that matches the	
	pattern	ı.	
	Returns a directory handle on success, a negative number if there is an error		
Prototype	short	short sys_fsys_findfirst(const char *path,	
		const char *pattern,	
	<pre>struct s_file_info *file);</pre>		

Function	0x36 sys_fsys_findnext		
Description	Given the directory handle for a previously open search (from		
	sys_fsys_findfirst), and a file_info structure, fill out the structure with the file		
	information of the next file to match the original search pattern.		
	Returns 0 on success, a negative number if there is an error		
Prototype	short sys_fsys_findfirst(const char *path,		
	const char *pattern,		
	<pre>struct s_file_info *file);</pre>		
C Example	struct s_file_info file;		
	<pre>short dir = sys_fsys_findfirst("/hd0/System/",</pre>		
	"*.pgx",		
	<pre>&amp;file_info);</pre>		
	if (dir == 0) {		
	// file_info contains information		
	// Look for the next		
	<pre>short result = sys_fsys_findnext(dir, &amp;file_info);</pre>		
	} else {		
	<pre>// Could not read the file entry }</pre>		
Assembly	move.w #\$36,d0 ; Function: sys_fsys_findnext		
	move.w (dir),d1 ; Directory		
	lea.l file_info,d2 ; Pointer to the file info structure trap #15		

Function	0x37	sys_fsys_delete
----------	------	-----------------

Description	Delete a file or directory, given its path.			
	Returns 0 on success, a negative number if there is an error			
Prototype	short sys_fsys_delete(const char *path);			
C Example	<pre>short result = sys_fsys_delete("/hd0/test.txt");</pre>			
Assembly	move.w #\$37,d0 ; Function: sys_fsys_delete lea.l path,d1 ; Path trap #15			

Function	0x38	sys_fsys_rename	
Description	Renam	e a file or directory.	
	Return	s 0 on success, a negative number if there is an error	
Prototype	short	<pre>short sys_fsys_rename(const char *old_path,</pre>	
C Example	short	result = sys_fsys_rename("/hd0/test.txt", "doc.txt");	
Assembly	move.w #\$38,d0 ; Function: sys_fsys_delete lea.l path,d1 ; Old Path lea.l new_name,d2 ; New Name trap #15		

Function	0x39	sys_fsys_mkdir	
Description	Create a directory.		
	Returns 0 on success, a negative number if there is an error		
Prototype	<pre>short sys_fsys_mkdir(const char *path);</pre>		
C Example	short	result = sys_fsys_mkdir("/hd0/Samples");	
Assembly	1	#\$39,d0 ; Function: sys_fsys_delete path,d1 ; Path 15	

Function	0x3A	sys_fsys_load	
Description	Load a	Load a file into memory.	
	Takes t	Takes three arguments:	
	•	path: the path to the file to load	
	•	destination: the destination address in memory (0 to use the address	

	in the file)
	• start: a pointer to a long to receive the starting address, if the file is an executable binary.
	Returns 0 on success, a negative number if there is an error
Prototype	<pre>short sys_fsys_load(const char *path,</pre>
C Example	<pre>long start; short result = sys_fsys_load("hello.pgx", 0, &amp;start);</pre>
Assembly	move.w #\$3A,d0 ; Function: sys_fsys_load lea.l path,d1 ; Path clr.l d2 lea.l start,d3 trap #15

Function	0x3B	x3B sys_fsys_save	
Description	Not im	Not implemented yet.	
Destations			
Prototype			
C Example			
Assembly			

Function	0x3C	sys_fsys_register_loader
Description	Register a file loader for a binary file type.	
	represe	oader is a function that takes a channel number for a file to load, a long enting the destination address, and a pointer to a long for the start s of the program. These last two parameters are the same as are ed the sys_fsys_load.
	The registration function takes two arguments:	
	•	extension: a three character extension to map the file type to the loader
	•	loader: a pointer to the loading routine.
		ccess, returns 0. It there is an error in registering the loader, returns a ve number.
Prototype	short	<pre>sys_fsys_register_loader(const char * extension,</pre>

```
p_file_loader loader);
          short foo_loader(short chan, long destination, long * start) {
C Example
             // Load file to destination (if provided)
             // If executable, set start to address to run
             return 0; // If successful
          };
          // ...
          short result = sys_fsys_register_loader("F00", foo_loader);
                               ; Function: sys_fsys_run
          move.w #$3C,d0
Assembly
          lea.l path,d1
                               ; Path
          clr.w d2
                               ; argc is 0
                               ; argv is null
          clr.1 d3
          trap #15
```

# **Process and Memory Calls**

Number	Name	Description
0x40	sys_proc_run	Load and run an executable file

Function	0x40	sys proc run	
Description	Load and run an executable binary file.		
	It takes three arguments:		
		ance argumento.	
	•	path: the path to the file to run	
	•	argc: the number of parameters to give to the executable	
	argv: an array of strings containing the parameters to give to the executable		
	This fu	nction will not return on success, since Foenix/MCP is single tasking.	
		turn value will be an error condition.	
Prototype	short	sys_proc_run(const char * path,	
		int argc,	
		char * argv[]);	
C Example	char 'he	rgc = 2; * argv[] = { ello.pgx", est"	
	}; short	result = sys_proc_run("hello.pgx", argv, argc);	
Assembly		#\$40,d0 ; Function: sys_fsys_run path,d1 ; Path	

	; argc is 0 ; argv is null
trap #15	

# Miscellaneous Calls

Number	Name	Description
0x50	sys_time_ticks	Get the number of "ticks" since system startup
0x51	sys_time_setrtc	Set the date and time in the real time clock
0x52	sys_time_getrtc	Get the date and time from the real time clock
0x53	sys_kbd_setlayout	Set the keyboard layout translation tables
0x54	sys_err_message	Get the error message for a given error number

Function	0x50	sys_time_ticks
Description	Returns the number of "ticks" since system startup.	
	interru This tic	re being timed by the real time clock chip, which allows for a periodic pt every 976 microseconds, or just a little short of once a millisecond. Ek counter will therefore serve as a reasonable approximation to a cond clock, but it should not be used for critical timing.
Prototype	<pre>long sys_time_ticks()</pre>	
C Example	<pre>long ticks = sys_time_ticks();</pre>	
Assembly	trap #	w #\$50,d0 ; Function: sys_time_ticks #15 c count will be a 32 bit number in d0

Function	0x51	sys_time_setrtc	
Description	Sets the date and time in the real time clock. The date and time information is provided in an s_time structure (see below).		
Prototype	<pre>void sys_time_setrtc(struct s_time *time)</pre>		
C Example	<pre>struct s_time time; // sys_time_setrtc(&amp;time);</pre>		
Assembly		#\$51,d0 ; Function: sys_time_setrtc time,d1 ; Pointer to s_time structure 15	

Function	0x52	sys_time_getrtc
Description	Gets the date and time in the real time clock. The date and time information is	

	provided in an s_time structure (see below).				
Prototype	<pre>void sys_time_getrtc(struct s_time *time)</pre>				
C Example	<pre>struct s_time time; // sys_time_getrtc(&amp;time);</pre>				
Assembly	move.w #\$52,d0 ; Function: sys_time_getrtc lea.l time,d1 ; Pointer to s_time structure trap #15				

# Extending the System

Foenix/MCP is designed to be somewhat extensible. Since it is meant to be small and stay as much out of the way of the user programs as possible, Foenix/MCP does not have all of the features that absolutely everyone will want. Therefore, there are four main ways that the user can extend the capabilities of Foenix/MCP: channel device drivers, block device drivers, keyboard translation tables, and file loaders.

## Channel Device Drivers

Channel device drivers provide the functions needed by Foenix/MCP to support a channel opened on a device. With some exceptions, each channel system call is routed through the channel to the correct channel driver function. Channel drivers can be added to the system using the sys\_chan\_register call, specifying all of the relevant information about the driver using a structure:

```
struct s_dev_chan {
   short number;
                           // Number of the device
   char * name;
                           // Name of the device
   FUNC_V_2_S init;
                           // Initialize the device
                           // Open a new channel for the device
   FUNC_CBS_2_S open;
   FUNC V 2 S close;
                           // Close a channel
   FUNC_CBS_2_S read;
                          // Read a sequence of bytes from the device
   FUNC_CBS_2_S readline; // Read a line of text from the device
   FUNC_C_2_S read_b;
                           // Read a single byte from the device
   FUNC_CcBS_2_S write;
                           // Write a sequence of bytes to the device
   FUNC_CB_2_S write_b;
                           // Write a single byte to the device
   FUNC_C_2_S status;
                           // Return the status of the device
   FUNC_C_2_S flush;
                           // Commit any pending writes to the device
                      // Set the in/out position of the device
   FUNC_CLS_2_S seek;
   FUNC_CSBS_2_S ioctrl;
                           // Send commands to the device or driver
};
```

Most of the fields in the structure are function pointers, which have one of the following types:

```
typedef short (*FUNC_V_2_S)();
```

```
typedef short (*FUNC_CBS_2_S)(p_channel, unsigned char *, short);
typedef short (*FUNC_C_2_S)(p_channel);
typedef short (*FUNC_CCBS_2_S)(p_channel, const unsigned char *, short);
typedef short (*FUNC_CB_2_S)(p_channel, unsigned char);
typedef short (*FUNC_CLS_2_S)(p_channel, long, short);
typedef short (*FUNC_CSBS_2_S)(p_channel, short, unsigned char *, short);
```

Where p\_channel is a pointer to a channel structure, which maps an open channel to its device and provides space for the channel driver to store data relevant to that particular channel. The channel device drivers are passed this structure directly by the channel system calls, rather than the channel number used by user programs.

To implement a driver for a new channel device, all of the functions should be implemented (if a function is not needed, it should still be implemented but return a 0). Then a s\_chan\_dev structure should be allocated and filled out, with the number being the number of the device to support, and name points to a suitable name for the device.

Most of the functions needed are directly mapped to to the channel system calls of the same name, and they simply perform the operations needed for those calls. Three functions should be called out for special consideration:

The init function performs initialization functions. It is called once per device. This can be a place for setting up the device itself or installing interrupt handlers for the device.

The open function is called when the user program opens a channel, after a channel structure has been allocated for the channel. This is the correct place for setting up a connection for a specific transaction on the device. This is another point where interrupt handlers might be installed or turned on, or when specific connection settings are made in the device (like serial baud rate).

The close function is called when the user program closes a previously opened channel. This function should perform any house keeping functions needed before the channel is returned to the kernel's pool. In particular, if the device buffers writes, any writes that are still pending should be written to the device.

## **Block Device Drivers**

Block device drivers are used by Foenix/MCP to provide block level access to block devices like the SD card, floppy drive, and IDE/PATA hard drive. The main use of block device

drivers is the FatFS file system, which is used to provide file channels. Block drivers can be added to the system in a similar way to channel device drivers by implementing the functions needed by Foenix/MCP and registering them using the sys\_bdev\_register call. The information about the block device is provided through a s block dev structure:

The block device structure is similar to the channel device in that it mostly provides the functions needed to implement the block system calls, using the following function pointer types:

```
typedef short (*FUNC_LBS_2_S)(long, unsigned char *, short);
typedef short (*FUNC_LCBS_2_S)(long, const unsigned char *, short);
typedef short (*FUNC_SBS_2_S)(short, unsigned char *, short);
typedef short (*FUNC_LB_2_S)(long, short);
```

One difference with the channel drivers is that a block driver is tied to its specific device, therefore the handler functions do not take a device number or other structure.

As before, when registering a driver, the device number is provided in the number field, and a useful name is provided in name. The init function will be called once to allow the driver to initialize the device, install interrupt handlers, or perform other functions.

Otherwise, read and write perform the getblock and putblock functions, and take a block address, a buffer of bytes, and a buffer size as arguments. The status and flush functions map to the sys\_bdev\_status and sys\_bdev\_flush calls. And finally, ioctrl maps to the sys\_bdev\_ioctrl function, and takes a command number, a buffer of bytes, and a size of the buffer as arguments.

# **Keyboard Translation Tables**

# File Loaders

# **Appendix**

## **ANSI Terminal Codes**

Foenix/MCP supports a basic subset of the VT102 ANSI terminal codes. The following escape sequences are supported:

Sequence	Name	Function
ESC[ # @	ICH	Insert characters
ESC [ # A	CUU	Move the cursor up
ESC [ # B	CUF	Move the cursor forward
ESC [ # C	CUB	Move the cursor back
ESC [ # D	CUD	Move the cursor down
ESC [ # J	ED	Erase the screen
ESC [ # K	EL	Erase the line
ESC [ # P	DCH	Delete characters
ESC [#;#H	CUP	Set the cursor position
ESC [# m	SGR	Set the graphics rendition

For the SGR sequence, a fairly limited set of codes are currently supported, mainly to do with the color and intensity of the text:

Code	Function	
0	Reset to defaults	
1	High intensity / Bold	
2	Low intensity / Normal	
22	Normal	
30 - 37	Set foreground color	
40 - 47	Set background color	
90 - 97	Set bright foreground color	
100 – 107	Set bright background color	

**NOTE:** If the program does not want the console to interpret ANSI codes, this feature can be turned off by calling sys\_chan\_ioctrl on the console channel to be changed. A command of 0x01 will turn ANSI interpretation on, while a command of 0x02 will turn it off. When ANSI

interpretation is turned off, only the core ASCII control characters will still be recognized: 0x08 (backspace), 0x09 (TAB), 0x0A (linefeed), and 0x13 (carriage return).

## **Keyboard Scan Codes**

Foenix/MCP uses the same Foenix scan codes that the original 65816 Foenix kernel used. These scan codes are derived from the standard "set 1" scan codes with modifications to get the scan codes to fit within a single byte. The base scan codes for a US QWERTY keyboard are listed below.

When a key is pressed or released, bits 0 - 6 are the same, and follow the table below. A "make" scan code is sent when the key is pressed. For make scan codes, bit 7 is clear (0). A "break" scan code is sent when a key is released. For break scan codes, bit 7 is set (1).

Example—the user presses and releases the space bar: Two scan codes will be sent. First, the make code 0x39 will be sent. Second, the break scan code of 0xB9 will be sent when the key is released.

	0_	1_	2_	3_	4_	5_	6_	7_
_0		Q	D	В	F6	KP2	PRSCRN	
_1	ESC	W	F	N	F7	КР3	PAUSE	
_2	! 1	E	G	М	F8	KP0	INS	
_3	@ 2	R	Н	< ,	F9	KP.	HOME	
_4	# 3	Т	J	> .	F10	MONITOR	PGUP	
_5	\$ 4	Υ	K	? /	NUMLOCK	СТХ	DEL	
_6	% 5	U	L	RSHIFT	SCRL0CK	HELP	END	
_7	^ 6	I	: ;	KP*	KP7	F11	PGDN	
_8	& 7	0	<i>u 1</i>	LALT	KP8	F12	UP	
_9	* 8	Р	~ `	SPACE	KP9	RBLANK	LEFT	
_ <b>A</b>	( 9	{ [	LSHIFT	CAPS	KP-	LBLANK	DOWN	
_B	) 0	} ]	\	F1	KP4	LFNX/OS	RIGHT	
_c		ENTER	Z	F2	KP5	RALT	KP/	
_ <b>D</b>	+ =	LCTRL	X	F3	KP6	RFNX/MEN	KPENTER	
_E	BSPACE	А	С	F4	KP+	RCTRL		
_ <b>F</b>	TAB	S	V	F5	KP1			

## **Useful Data Structures**

#### Time

```
// Structure used for real time clock functions
struct s_time {
```

#### File attribute bits:

0x01	Read only
0x02	Hidden file
0x04	System file
0x10	Directory
0x20	Archive

**Error Codes** 

PGX File Format

**PGZ File Format**